

**FIG. 1**

200

	Function Description	Max. WL level where item is NOT managed
202 {	Automatic (vehicle generated) EMERGENCY call	NONE
	Manually generated EMERGENCY call	
	Collision Avoidance Warnings	
	Critical Safety Messages (Ex: Brakes, Engine Overheated)	
204 {	Safety System Status Messages (Ex: ABS inoperative, note: Brakes still function here)	<u>90</u>
	Vehicle Warning Messages (Ex: Engine Temperature, note: prior to Overheat)	
	Navigation Turn-by-turn Instructions (General way-finding Instructions)	
206 {	Detailed Navigation Instructions (Ex: Intersection/Interchange detail)	<u>80</u>
208 {	Telephonic Interaction w/ Operator-assisted Service Center	<u>70</u>
210 {	Operationally Significant Vehicle System Status (Ex: Low Fuel)	<u>60</u>
	Navigation Point-of-Interest search/display (find nearest gas station)	
	"Basic" Telephonic Interaction w/ an automated Service Center	
	Speech-Interface cellular phone activities	
212 {	Navigation Map Interactions	<u>50</u>
	"Involved" Telephonic Interaction w/ an automated Service Center	
214 {	Voice-guided server browsing	<u>40</u>
	Text-to-Speech read-back of E-Mail	
216 {	Manual interface w/ cellular pad (keypad)	<u>30</u>
218 {	Voice directed composition of E-Mail	<u>20</u>
220 {	Manual composition of E-Mail	<u>10</u>

FIG. 2

	302 Vehicle Status Message	304 Display Instruction
306 {	Engine Overheated Brakes Not Functioning Collision Avoidance Warning	Display Immediately
308 {	ABS Inoperative Generator Not Functioning Engine Temperature Rising Low Fuel	Delay Display up to M Minutes if Driving Workload Estimate (DWE) is Over W1
310 {	Engine Oil Change Due Tire Rotation Due	Display if Vehicle Speed is Less Than S kph and DWE is Less Than W2

FIG. 3